



Installation Instructions

The NanoStation Window/Wall Mounting kit comes with everything necessary for installation (all you need is a screwdriver). The Kit can easily be installed by following just three steps.


Wall

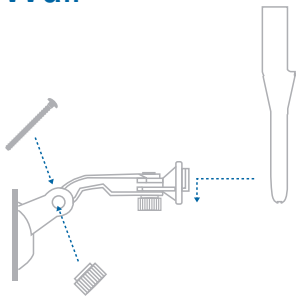

1. Assemble Mount

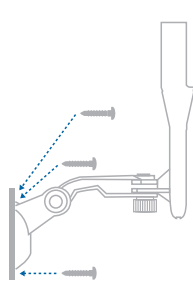


2. Secure on wall

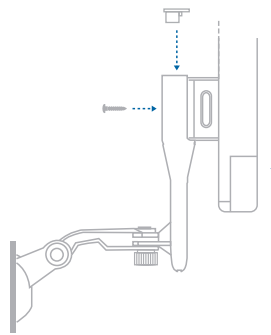


3. Secure Device on Mount


Window

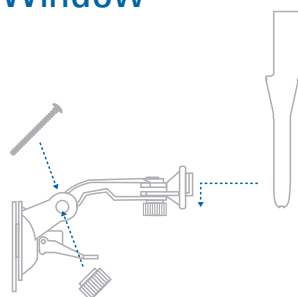

1. Assemble Mount

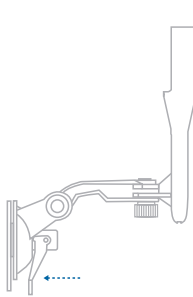

2. Secure on window

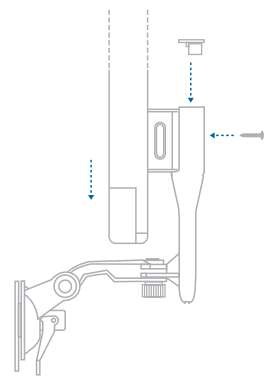

3. Secure Device on Mount

Kit Contents



Wall Screws



Holster Screw



Window Adapter



Wall Adapter



Arm



Holster